



1. Seal packing
  2. Rear combination lamp
- Refer to [GI-4, "Components"](#) for symbols in the figure.

## Removal and Installation

INFOID:0000000004239735

### CAUTION:

Disconnect the battery negative terminal or remove the fuse.

### REMOVAL

1. Remove the rear wheel house finisher. Refer to [EXT-24, "REAR WHEEL HOUSE PROTECTOR : Exploded View"](#).
2. Disconnect the rear combination lamp connector.
3. Remove the rear combination lamp mounting nuts.
4. Pull the rear combination lamp toward rear of the vehicle. Remove the rear combination lamp.

### INSTALLATION

Install in the reverse order of removal.

## Replacement

INFOID:0000000004239736

EXL

### CAUTION:

- Disconnect the battery negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

### REAR TURN SIGNAL LAMP BULB

1. Remove the rear wheel house finisher. Refer to [EXT-24, "REAR WHEEL HOUSE PROTECTOR : Exploded View"](#).